
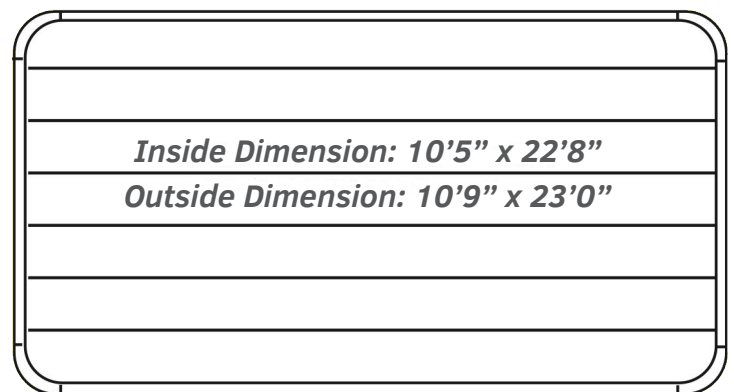


HORIZONTAL RADIUS CORNER

ASSEMBLY INSTRUCTIONS

- **Step 1** - Place the top 18" wide x 23' long radius corner face down on supported surface. Interlock (5) 18" wide x 23' long square sections with bottom 21" wide x 23' long radius corner section.
- **Step 2** - Bolt hanger plates to sprits.
- **Step 3** - Attach sprits onto sections using hook bolts.
- **Step 4** - Attach (10) bottom and right hand trim brackets to sections.
- **Step 5** - Attach (13) top and left hand trim brackets to sections.
- **Step 6** - Attach top and bottom trim and splices to section with supplied fasteners.
- **Step 7** - Fasten (4) radius corners to end trim.
- **Step 8** - Slide end trim assembly into top and bottom trim.
- **Step 9** - Attach corners of trim securely with screws provided.
- **Step 10** - Attach (2) ladder stops to top of face.

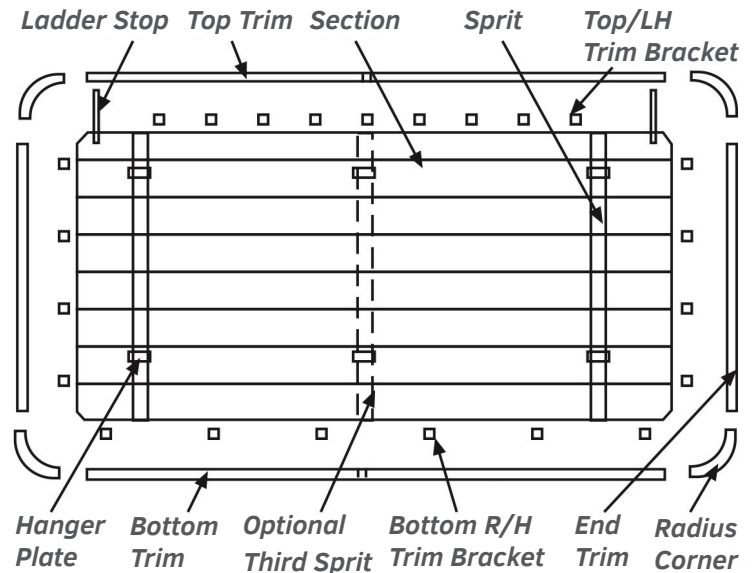

TIFFIN METAL PRODUCTS COMPANY™

450 Wall Street · Tiffin, Ohio 44883
800-537-0983 · www.tiffinmetal.com

