
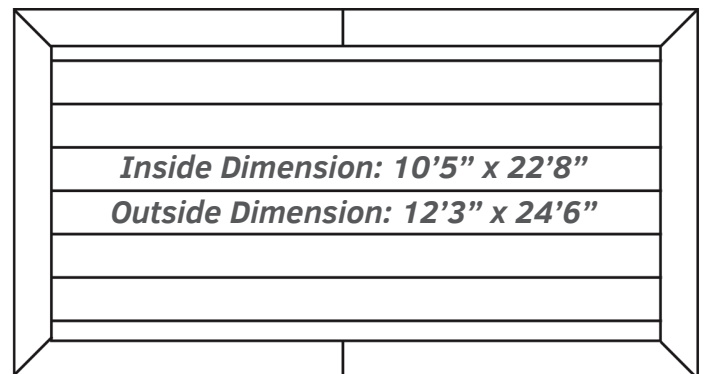


HORIZONTAL SQUARE CORNER

ASSEMBLY INSTRUCTIONS

- **Step 1.** - Place (8) 18" wide x 24'5-1/2" long horizontal sections face down on supported surface. Interlock each section
- **Step 2** - Bolt hanger plates to sprits.
- **Step 3** - Attach sprits onto sections using hook bolts.
- **Step 4** - Turn face over.
- **Step 5** - Attach trim brackets to face of sections using fasteners.
- **Step 6** - Attach top and bottom trip to section trim using fasteners. Slide trim to appropriate length
- **Step 7** - Slip end trim into top and bottom trim.
- **Step 8** - Attach corners of trim securely with screw provided.
- **Step 9** - Lift into position.

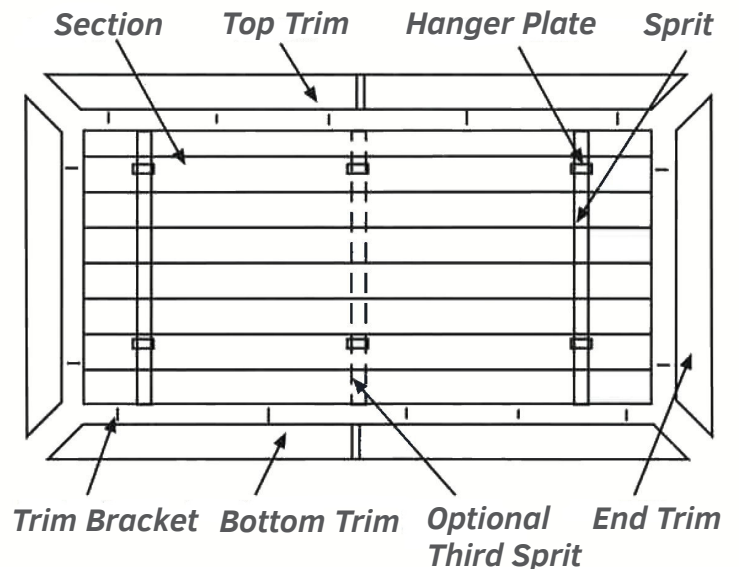

TIFFIN METAL PRODUCTS COMPANY™

450 Wall Street · Tiffin, Ohio 44883
800-537-0983 · www.tiffinmetal.com

